


# SYSTEM LAYOUT

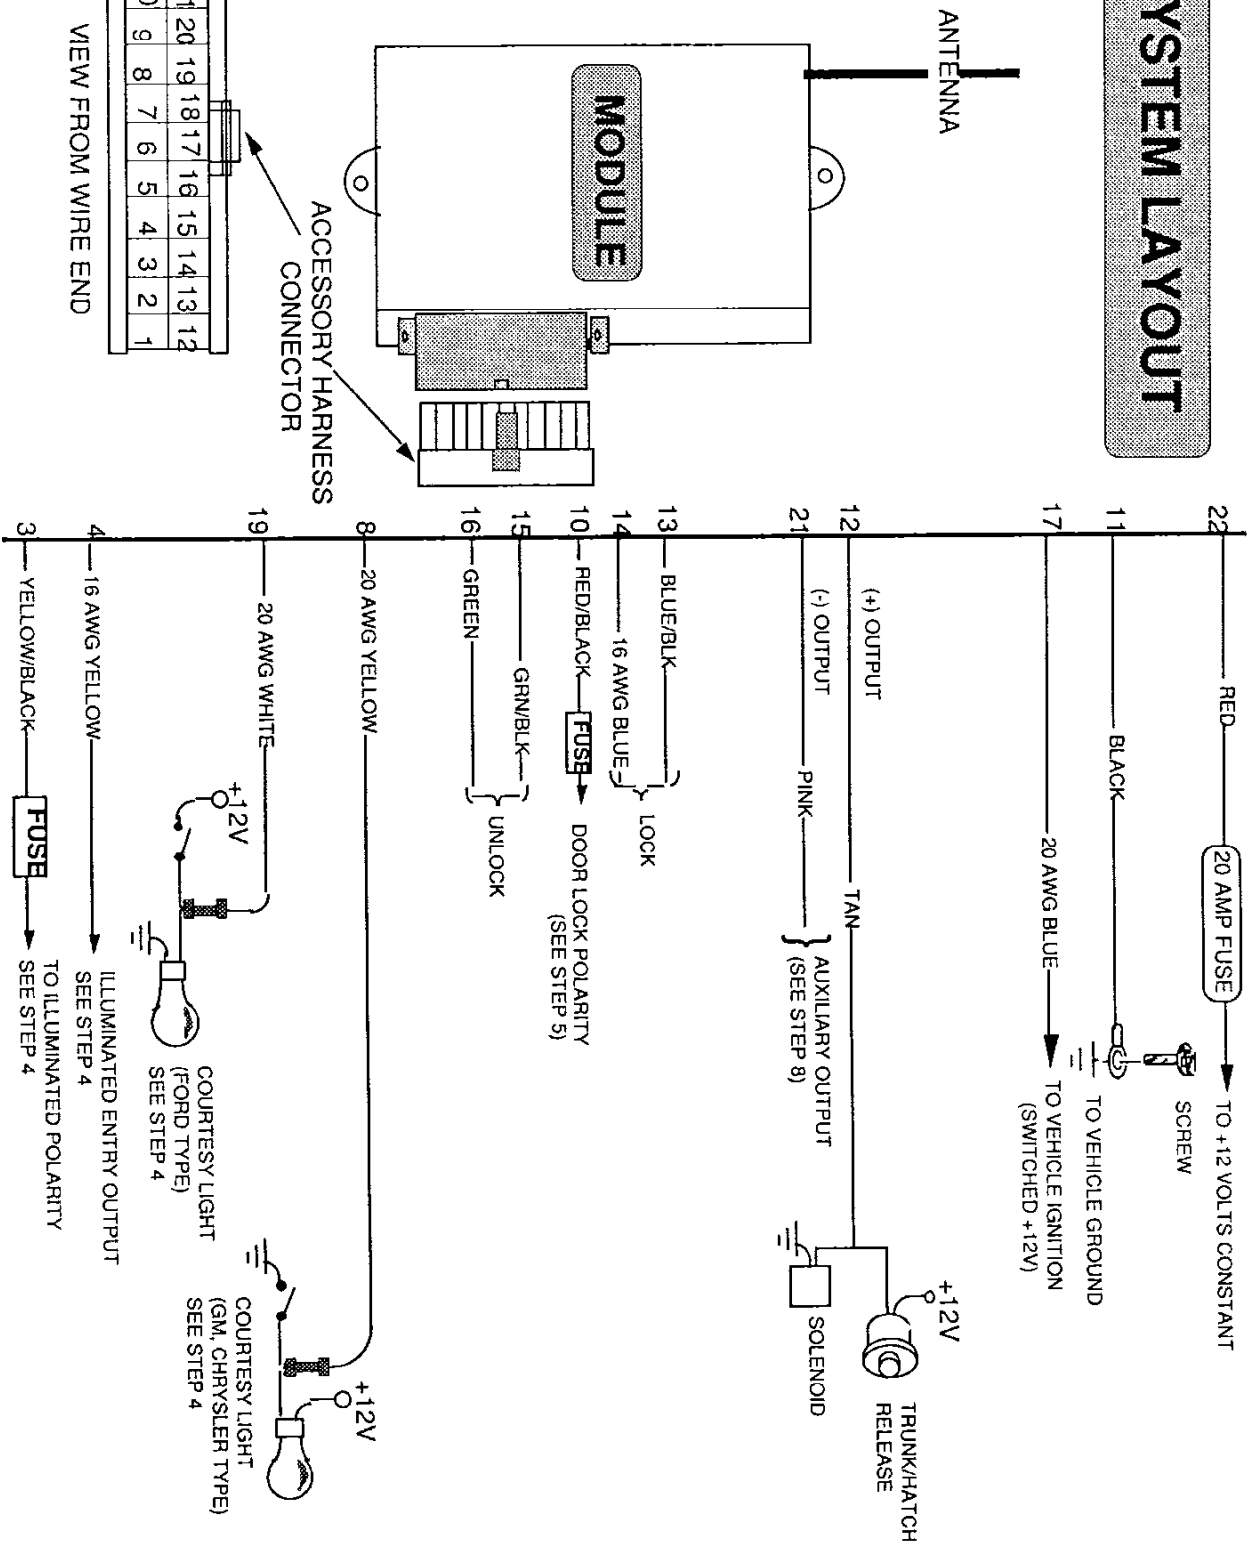

## **VIII        RKE-1        Remote Keyless Entry**

### **A.        Remote Control Convenience.**

The RKE-1 will remotely lock & unlock your vehicle's power door locks as well as engage your power trunk/hatch (on vehicles equipped with factory power door locks & trunk). System includes, (2) 2 button remote transmitters, (1) control module, (1) wire harness.

To lock the doors - press & release button 1 on the transmitter.

To unlock the doors        - press & release button 2 on the transmitter.

To open trunk                - press & hold button 2 for 2 seconds.

To activate Aux. output    - press & hold button 1 for 2 seconds.

### **B.        Installation Features.**

1. On board door lock relays that are polarity selectable (compatible with all type of door lock systems.
2. On board positive output trunk relay.
3. Automatic power door lock & unlock (doors will lock automatically when car is started and unlock when car is turned off).
4. Illuminated entry & exit, with on board relay that is polarity selectable.
5. Auxiliary negative output that, can be connected to the vehicles horn for remote panic for personal protection, or use the output for other code alarm accessories like the CSM-1 remote car starter.

\* All negative outputs are 500mA max, and all positive outputs are 20 Amps max.