

P **PRESTIGE**

Owner's Guide

For Models:

APSRs

Factory Remote

IMPORTANT NOTE: The operation of the Security and Convenience System as described in this manual is applicable to most vehicles. However, due to the configuration of some vehicles, some functions AND/OR SAFETY PRECAUTIONS may not apply. Please see your installing dealer for more information.

Table of Contents


Using Your Remote Control	3
Locking the Vehicle Doors.....	3
Arming the Security System.....	3
Unlocking the Vehicle Doors.....	3
Disarming the Security System.....	3
User Selectable Notification Chirps.....	3
User Selectable LED.....	3
Valet Mode.....	4
Manually Overriding the Security System.....	4
Using Your Remote Vehicle Starter	4
Remote Starting Your Vehicle.....	4
Remote Start Shutdown.....	4
Entering Your Vehicle while it is Running via Remote Start.....	4
Preheating or Precooling the Vehicle's Interior.....	4
Remote Start Safety Features.....	5
Using the "Quick-Stop" Feature.....	5
Turbo Timer Mode (optional).....	5
Status LED, Light Flashes and Siren/Horn Indications	6
Warranty Information	7

Using Your Remote Control

Door Lock

To lock the vehicle doors press and release the  button.


Arming the Security System (Optional)

To arm the system, exit the vehicle, close all doors, then press the  button. The parking lights will flash 1 time indicating the system is armed, has locked the doors (if equipped and connected) and activated the starter disable feature. The LED status indicator will blink steadily, once per second.

Door Unlock

To unlock the vehicle doors press and release the  button.

Disarming the Security System

To disarm the system press the  button. The parking lights will flash 1 time, indicating the system is disarmed and has unlocked the doors (if equipped and connected).

User Selectable Notification Chirps

System ARM/DISARM chirps can be toggled ON or OFF without entering the programming feature banks.

1. Turn the ignition ON then OFF.
2. Press and release the valet/programming button 3 times. The system will respond with 1 chirp for ON or 2 chirps for OFF.

User Selectable LED

This feature will control whether the LED is ON or OFF when the system is Armed/Locked and can be toggled ON or OFF without entering the programming feature banks.

1. Turn the ignition ON, OFF, ON, OFF.
2. Press and hold the valet/programming button for 5 seconds. The system LED will respond with 1 flash for ON or 2 flashes for OFF.

Valet Mode (Optional)

When valet mode is activated the status LED will light solid, and all security and remote start functions will be disabled. To enter or exit valet mode simply follow the steps outlined below:

1. Turn the vehicle's ignition ON.
2. Push and hold the programming/valet button.
3. The LED will turn on solid when valet mode is active
4. Release the programming/valet button.

Manually Overriding the Security System

Your system can be disarmed without the use of the transmitter. This is necessary to operate your vehicle if the transmitter is lost or its battery fails. To by-pass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Turn the ignition key to the ON position.
3. Within 10 seconds, press and release the valet push button switch.

The alarm system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally.

Using Your Remote Starter

Remote Starting Your Vehicle

To activate the remote start function, use the button sequence checked below. The system will sound, the parking lights will flash 1 time and the system will check the vehicle to ensure it is safe to start. If all safety parameters are correct, the vehicle will start. The vehicle's parking lights will turn on (or flash depending on system settings) as a visual indication that the vehicle has started and is running.

If your vehicle stalls or does not start, the system will pause 5 seconds, then try 3 more times to start the vehicle (a total of 4 attempts). The system will pause 5 seconds between each start attempt.

- Lock, Lock, Lock
- Lock, Unlock, Lock

Remote Start Shutdown

Use the button sequence checked above.

Entering the Vehicle while it is Running via Remote Vehicle Start

1. Unlock the vehicle's doors.
2. Enter the vehicle. **DO NOT PRESS THE BRAKE PEDAL!**
3. Insert the key into the ignition switch and turn to the ON or RUN position.
4. Press the brake pedal. The remote vehicle starter will disengage and the vehicle will operate normally.

Preheating or Precooling the Vehicle's interior

Before exiting the vehicle, set the temperature controls to the desired setting and operation. After the system starts the vehicle, the heater or air conditioner will activate and heat or cool the vehicle's interior to your setting.

Remote Start Safety Features



For safety and security reasons, the system will shutdown or prevent the remote vehicle starter from activating if any of the following occur:

1. The vehicle's hood is open.
2. The brake pedal is pressed prior to turning the ignition key to the ON position.
3. The engine is over-revved (tach checking only).
4. Valet Mode is active. Refer to the Valet Mode section of this manual on page 5.
5. Remote Start Ready Mode is not set. Manual transmission vehicle's only.

Using the "Quick-stop" Feature

If you want to make a short stop and keep your vehicle running (to keep the interior warm or cool), the quick-stop feature allows you to do this while keeping your vehicle secure and your keys with you.

To engage Quick Stop:

1. Stop the vehicle and place the transmission in PARK.
2. With your foot off the brake pedal, press and release the  button 2 times within 2 seconds. The LED will flash 3 times to confirm quick stop is entered.
3. Remove the keys from the ignition and exit the vehicle. Press the  button to lock the vehicle's doors if desired.

Note: Do not leave children or animals unattended in the vehicle when using the quick-stop feature.

Turbo Timer (Optional)

This option will keep the engine running to allow the vehicle's turbo to properly cool down before shutting the engine off.

To engage the Turbo Timer feature:

1. With the vehicle running via the ignition key and your foot off of the brake pedal.
2. Engage the vehicle's parking brake.
3. The vehicle's parking lights will turn on to verify the Turbo Timer feature has been activated.
4. Turn the ignition key OFF, the vehicle will continue to run until the pre-programmed time has elapsed (1, 3, or 5 minutes)

To disengage the turbo timer feature, press the vehicle's brake pedal.

Status LED, Light Flashes, and Siren/Horn Indications

Status LED Flash Indications

LED Flashes	Function
OFF	Unlocked / Disarmed
Slow Flash	Locked / Armed
ON (Solid)	Valet Mode
1 Flash / Disarmed	Zone 1 Trigger, Shock Sensor
2 Flashes / Disarmed	Zone 2 Trigger, Trunk / Hood
3 Flashes / Disarmed	Zone 3 Trigger, Door

Siren/Horn Chirp Indications

Chirps	Function
1	Lock / Arm
2	Unlock / Disarm
3	Door Ajar Upon Locking /Arming
4	Disarm / Triggered

Parking Light Flash Indications

Flashes	Function
1	Lock / Arm
2	Unlock / Disarm
3	Disarm / Triggered
ON (Solid or Slow Flash)	Remote Started

Remote Start Shutdown Diagnostics

Parking Light Flashes	Shutdown Zone
1 Flash	Runtime Expired
2 Flashes	Remote Shutdown
3 Flashes	Brake ON
4 Flashes	Manual Transmission Ready Mode
5 Flashes	Hood Open
6 Flashes	Low Tach Signal
7 Flashes	Tach / Crank Average not learned
8 Flashes	High Tach Signal



LIMITED LIFETIME WARRANTY

Applies to Prestige Series Control Modules, Sirens, Sensors, and Relays.

Voxx Electronics Corporation (the Company) warrants to the original purchaser of this product that should this product or any part thereof, (other than transmitters) under normal use and conditions, be proven defective in material or workmanship during the lifetime of the vehicle, in which it was originally installed from the date of original purchase such defect(s) will be repaired or replaced with new or reconditioned product, (at the Company's option) without charge for parts or repair labor. A transmitter is warranted for 12 months from the date of original purchase.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. This Warranty is not transferable.

This Warranty does not cover damage to the vehicle's electrical system or costs incurred for removal or reinstallation of the product. This Warranty does not cover batteries, broken LCD or OLED display screens, nor apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, abuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT WITHOUT COST OF INSTALLATION.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Voxx Electronics Corporation.
Customer Service 1-800-225-6074
WWW.VOXXELECTRONICS.COM

FCC COMPLIANCE

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

Warning!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PATENTED: www.voxxintl.com/company/patents