



Remote Keyless Entry System

IMPORTANT NOTE: The operation of the Security and Convenience System as described in this manual is applicable to most vehicles. However, due to the configuration of some vehicles, some functions AND/OR SAFETY PRECAUTIONS may not apply. Please see your installing dealer for more information.

Table of Contents

Using Your Remote Control	3
Locking the Vehicle	3
Unlocking the Vehicle	3
Two Stage Door Unlock (optional)	3
Eliminating Lock / Unlock Notification Chirps	3
Valet Mode	3
Activating Trunk Release (optional)	4
Using the Progressive Car Finder Feature	4
Using the Personal Protection Alarm	4
LED, Horn and Parking Light Indications	4
Transmitter Button Functions	5
Replacing Remote Control Batteries	5
Warranty Information	6

Using Your Remote Control

Locking the Vehicle

To lock the vehicle, exit the vehicle, close all doors, then press the $\fill \fill \fill$

NOTE: The system is equipped with a feature called Silent Choice. If enabled, the system requires a second press of the button to activate an audible locking response from the vehicle.

Unlocking the Vehicle

To unlock the vehicle press the \mathfrak{F} button. The parking lights will flash 1 time, indicating the system has unlocked the doors and disabled the starter interrupt feature (if equipped and connected).

NOTE: The system is equipped with a feature called Silent Choice. If enabled, the system requires a second press of the $\ensuremath{\mathfrak{g}}$ button to activate an audible unlocking response from the vehicle. If your system is set up for 2 step unlock, a third press of unlock will activate the audible response.

Two Stage Door Unlock (Optional)

If this feature is enabled on your system, pressing the $\widehat{\vartheta}$ button one time will unlock only the driver's door. Press $\widehat{\vartheta}$ again within three seconds to unlock the remaining doors.

Eliminating Lock / Unlock Notification Chirps

System lock and unlock notification chirps can be toggled ON or OFF without entering the programming feature banks.

- 1. Turn the ignition ON then OFF.
- Press and release the valet/programming button 3 times. The system will respond with 1 chirp for ON or 2 chirps for OFF.

Valet Mode

When valet mode is activated the status LED will light solid, and the optional starter interrupt feature will be disabled. To enter or exit valet mode simply follow the 4 steps outlined below:

- 1. Turn the vehicle's ignition ON.
- 2. Push and hold the programming/valet button.
- 3. The LED will turn on solid when valet mode is active
- 4. Release the programming/valet button.

Activating the Trunk Release Feature (Optional)

Using the Progressive Car Finder Feature

Press the (3)) button to locate your vehicle. The system will sound 5 times at low volume, increasing in volume each time the button is pressed.

Using the Personal Protection Alarm (Panic)

LED, Horn and Parking Light Indications

LED Display Indications

LED	Function
OFF	UNLOCKED
SLOW FLASH	LOCKED
ON (SOLID)	VALET MODE

Horn Indications

Chirps	Function
1	UNLOCK
2	LOCK
5	CAR LOCATOR

Parking Light Flash Indications

Flashes	Function
1	DISARM
2	ARM
5	CAR LOCATOR

Transmitter Button Functions

	Lock	Unlock	Car Find / Panic	Trunk	Operation Method
Lock	х				Press and Release
Unlock		х			Press and Release
Trunk				х	Push and Hold (3 Sec)
Car Finder			х		Press and Release
Panic			х		Push and Hold (3 Sec)

Replacing Remote Control Batteries

1-Way Remote Control:

The batteries (model CR2016) inside each remote control should last approximately 1 year under normal use. When the batteries become weak you will notice the remote control range (the distance from the vehicle the remote control will work) deteriorate and the small LED on the remote control will dim. To replace the remote control batteries:

- 1. Unsnap and disassemble the halves of the remote control.
- Remove the old batteries, observing the +/- symbols on the batteries and replace with new CR2016 batteries.
- 3 Reassemble the halves of the remote control.
- 4. Test operation of the remote control.



LIMITED LIFETIME WARRANTY

Applies to Code Alarm Series Control Modules, Sirens, Sensors, and Relays.

Voxx Electronics Corporation (the Company) warrants to the original purchaser of this product that should this product or any part thereof, (other than transmitters) under normal use and conditions, be proven defective in material or workmanship during the lifetime of the vehicle, in which it was originally installed from the date of original purchase such defect(s) will be repaired or replaced with new or reconditioned product, (at the Company's option) without charge for parts or repair labor. A transmitter is warranted for 12 months from the date of original purchase.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. This Warranty is not transferable.

This Warranty does not cover damage to the vehicle's electrical system or costs incurred for removal or reinstallation of the product. This Warranty does not cover batteries, broken LCD or OLED display screens, nor apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, abuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT WITHOUT COST OF INSTALLATION.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Voxx Electronics Corporation, 150 Marcus Blvd., Hauppauge, New York 11788 / 1-800-645-4994

Audiovox Electronics Corporation. Customer Service 1-800-421-3209 WWW.CODE-ALARM.COM

FCC COMPLIANCE

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including any interference that may cause undesired operation.

Warning!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PATENTED: www.voxxintl.com/company/patents