



## Model APS-596N

### Owner's Manual

#### 5 Button Remote Security System with Dual Stage Shock Sensor

**IMPORTANT !** In order to provide the highest possible level of security to your vehicle, this system is equipped with selectable manual override circuitry. It is possible that you will need to manually override your security system if the transmitter becomes lost, or inoperative due to battery failure. Reading the sections on "**MANUALLY OVERRIDING YOUR SYSTEM**" is necessary to fully understand the procedure required to enable your vehicle in such situations. In addition, the chart on the last page of this manual has a section for the particular features and options installed in your vehicle as well as the override method selected. **Valet Switch manual override is pre-selected from the factory,** however, the system can be configured for "Custom Code" operation. Confirm the override mode selected on the last page of this manual, and familiarize yourself with the selection on it's operation.

#### **FEATURES :**

- 1 Five Button Programmable RF Transmitters
- 1 Five Button Programmable Transceiver
- Five Channel Receiver (Capable Of Accepting Up To 4 Transmitters)
- Code Hopping Technology
- Selectable Manual Override Mode
- Remote Panic in all modes
- Protected Valet
- User Programmable Manual Override Code
- 7 Function LED (Light Emitting Diode) - Arm / Disarm / Zone 1, 2, 3 / Valet / Arming
- Intrusion Alert with Memory
- Audible Arm / Disarm / Defective Zone / Tamper Confirmation
- Instant Siren Activation
- Starter Disable
- Additional Engine Immobilizer Output (optional relay required)
- True Last Door Arming (hardwire only)
- Defective Zone By-Pass
- Hardwire or Voltage Sense Selectable
- Active or Passive Arming Selectable
- Programmable Auto Lock On / Off
- Programmable Auto Unlock On / Off
- Programmable Door Lock Pulse Duration 1 Second / 3.5 Seconds/1 Sec L/ Dbl. U/L
- Programmable Active or Passive Door Locks
- User Programmable Permanent Chirp Delete
- On Command RF Chirp Delete from Transmitter
- 6 Tone Multi Tone Siren
- RF Inhibit with ignition on
- Parking Light Flasher
- Plug In Dual Stage Shock Sensor

#### **OPTIONS:**

- Remote Trunk Release ( must have electronic trunk release )
- Remote Keyless Entry ( must have power door locks )
- Multiple Vehicle Capable
- Remote Starter
- Remote Power Window Roll Up
- Remote Garage Door Interface
- Two Step Unlock Configurable
- Headlight Illumination During Arming, Disarming, Or Both

### **YOUR "Code Hopping" TRANSMITTERS**

The transmitters included with your new security system use the most advanced and secure form of radio frequency transmission available on any current automotive security system. Some of today's sophisticated auto thieves use a device known as a code grabber, which will receive and store the signal from your keychain transmitter, and retransmit at a later time to disarm your system.


Your anti code hopping transmitters will change their signal every time the button is pressed, so when a thief grabs then retransmits your signal, the alarm system *will not* respond.

If your transmitter button is pressed more than fifty times while it is out of range of the vehicle ( children playing with your keys ), the transmitter will not operate when you return to the vehicle and will need to be realigned to the receiver. To do this, simply press the lock button two times within a one second time period. The system will now respond to that transmitter each time a button is pressed.

**Note:** Your system has the option of using a siren, the vehicle horn, or both for the sounding device. Where the siren is referenced below, the horn or both may in fact chirp, or beep.

### **ARMING THE SYSTEM - ACTIVE**

1. Turn off the engine, exit the vehicle and close all doors, hood lid and trunk lid.
2. Press and release the Lock button on the keychain transmitter.

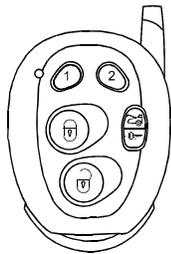

- Dash mounted LED begins to flash slowly.
- Parking Lights flash one time.
- Siren sounds one chirp.

If the siren/horn sounds 3 chirps, then you have left a door, trunk, or hood lid ajar. Simply close the opened entry point to provide full protection. If the siren "chirped" three times, sometime after arming, the exclusive delayed dome light learn circuit has been programmed and the system detected a open entry point after the learned delay expired. Again, closing the hood, trunk, or doors will correct the problem and you do not need to disarm the system to make the correction. If the siren/horn did not sound when arming, then the chirps have

been turned off and you should refer to the section titled "ELIMINATING THE ARM/DISARM CHIRPS" in this manual.

- Doors Lock - Optional
- Headlight Illumination - Optional

### **SILENT ARMING - ACTIVE**

1. Turn off the engine, exit the vehicle, and close all doors, hood lid, and trunk lid.
2. Press and hold the Lock button on the keychain transmitter for 2 seconds.
  - Dash mounted LED begins to flash slowly.
  - Parking Lights flash one time.
  - Siren will not sound.

If the siren "chirped" three times, sometime after arming, the exclusive delayed dome light learn circuit has been programmed and the system detected a open entry point after the learned delay expired. Closing the hood, trunk, or doors will

correct the problem and you do not need to disarm the system to make the correction.

- Doors Lock - Optional
- Headlight Illumination - Optional

**ARMING THE SYSTEM - PASSIVE (AUTOMATIC)**

1. Turn off the engine, exit the vehicle, and close and lock all doors, hood lid and trunk lid.
  - Dash mounted LED begins to flash rapidly, indicating 30 second passive arming has begun.
2. Opening any protected entry point during the 30 second passive arming cycle will immediately suspend automatic arming and the 30 second passive arming cycle will restart when all doors are closed. At the end of the passive arming cycle;
  - Dash mounted LED begins to flash slowly.
  - Parking Lights flash one time.
  - Siren sounds one chirp  
If the siren did not sound when arming, then the chirps have been turned off, and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.
  - Doors Lock - Optional  
Door locking during passive arming is a selectable feature.

The alarm can be programmed to allow the doors to lock only when arming using the keychain transmitter and they will not automatically lock during passive arming.

**PROTECTION WHILE THE SYSTEM IS ARMED**

- Opening any protected door, hood, or trunk lid will cause the alarm to immediately sound. The alarm will continue to sound for 30 seconds, then stop and continue to monitor all protected entry points. If the thief left a door opened, the alarm will sound for six 30 second cycles, remain armed and ignore that triggered zone.
- Whenever the system is armed, the dash mounted LED indicator will slowly flash. This serves as a visual deterrent to the potential thief. The LED is a very low current bulb and will not cause the vehicle's battery to drain, even when left unattended for extended periods.
- Whenever the system is triggered, the vehicle's parking lights will flash for the full 30 second alarm cycle, attracting visual attention to the vehicle.
- Optional - Whenever the system is armed, the vehicle's starting circuit will be bypassed. If the thief should choose to ignore the siren, the vehicle can not be started.
- Any mild impact to the vehicle's glass will cause the alarm to sound a short series of warning tones.
- Any strong impact to the vehicle's glass will cause the alarm to trigger for the full 30 second alarm cycle.

### **DISARMING THE SYSTEM**

As you approach the vehicle, press and release the Unlock button on the keychain Transmitter.

- Dash mounted LED turns off.

If passive arming was selected during the installation, then the LED will start flashing rapidly, indicating that the system is rearming automatically. Open any door to suspend the automatic arming.

- Parking Lights flash two times.

If the parking lights flashed three times, then the alarm was triggered in your absence. Before turning the key on, examine the LED to identify which zone was triggered.

- Siren sounds two chirps.

If the siren sounds 4 chirps, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.

If the siren did not sound when disarming, then the chirps have been turned off, and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.

- Doors Unlock - Optional

**Note:** If the optional 2 step door unlock circuit is installed, when the unlock transmitter button is activated, the drivers door only will unlock, pressing the unlock button a second time will cause all doors to unlock. If your transmitter has a separate lock unlock buttons, pressing the unlock button anytime after the first unlock command will cause all the vehicle doors to unlock.

- Headlight Illumination - Optional

### **SILENT DISARMING**

As you approach the vehicle, press and hold the Unlock button on the keychain transmitter for 2 seconds.

- Dash mounted LED turns off.

If passive arming was selected during the installation, then the LED will start flashing rapidly, indicating that the system is rearming automatically. Open any door to suspend the automatic arming.

- Parking Lights flash two times.

If the parking lights flashed three times, then the alarm was triggered in your absence. Before turning the key on, examine the LED to identify which zone was triggered.

- Siren will not sound.

If the siren sounds 4 chirps, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.

- Doors Unlock - Optional

**Note:** If the optional 2 step door unlock circuit is installed, when the unlock transmitter button is activated, the drivers door only will unlock, pressing the unlock button a second time will cause all doors to unlock. If your

transmitter has a separate lock/unlock buttons, pressing the unlock button anytime after the first unlock command will cause all the vehicle doors to unlock.

- Headlight Illumination - Optional

#### **WHILE THE SYSTEM IS SOUNDING**

If during a triggered state, you wish to shut off the siren without disarming your security system, simply press and release any transmitter button other than the disarm button. This action will turn off the siren yet leave the vehicle fully armed and protected. This feature is particularly useful if you are aware of children playing near your vehicle that may accidentally trigger your security system. In this case you can cancel the siren sounding without disarming your alarm.

#### **INTRUSION WARNING SIGNALS**

This system will inform you if an intrusion attempt has occurred while you were away from the vehicle. If an intrusion attempt has occurred, the siren will chirp 4 times and the parking lights will flash 3 times when disarming the system. Enter the vehicle and observe the dash mounted LED to identify which zone was triggered.

- ❶ If the LED is flashing one time...pause...one time...pause...etc., then an intrusion attempt was made to the shock sensor, or an accessory triggering device that may have been added to the system.
- ❷ If the LED is flashing two times...pause...two times...pause...etc., then an intrusion attempt was made to a hood or trunk pin switch that was added to the system, or to a light activated entry point if the alarm was installed using the voltage sensing feature.
- ❸ If the LED is flashing three times...pause...three times...pause...etc., then an intrusion attempt was made through one of the vehicle's doors.

These intrusion warning indicators are stored in the system's memory and will only be erased when the ignition key is turned on.

#### **PUSHBUTTON LED/VALET/OVERRIDE/PROGRAMMING SWITCH: (PBLED)**

The PBLED switch allows you to temporarily bypass all alarm functions, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm functions are bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be disarmed either by using your keychain transmitter, or by activating your personalized manual override code.

1. Enter the vehicle, and turn the ignition key to the on position.
2. Press and hold the PBLED switch until the LED turns on solid. The system will remain in the valet mode.
3. To return to normal operation, press and release the PBLED switch any time the ignition is on.

**Note:** Always remember to return the vehicle to the valet off position. This will ensure that the vehicle remains protected at all times.

#### **MANUALLY OVERRIDING YOUR SYSTEM:**

##### **USING THE PBLED OVERRIDE SWITCH**

Your Security System can be disarmed without the use of the keychain transmitter. This is necessary, since you will need the ability to operate your vehicle if the transmitter is lost or

its battery fails. If your system has been selected for Valet Switch manual override as indicated on the last page of this manual, to bypass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Turn the ignition key to the on position.
3. Within 5 seconds, press and release the PBLED override switch.

The alarm system will stop sounding and enter the (bypassed) mode. You can now start and operate the vehicle normally.

Typically this override mode is used only if the transmitter has become inoperative.

**Programming Your Custom Override Code:**

Unlike override switches easily found, and defeated, this security system allows the consumer to program a personal override code, offering a higher level of security. To take advantage of this option, programmable feature # 10 must be selected for the Custom Code Option. Consult your installation center for programming details. The system comes from the factory with a pre-programmed override code of 11. To change this default override code, do the following:

1. Disarm the system by use of the transmitter, or by use of the emergency override sequence. Turn the ignition switch to the on position.
2. Within 10 seconds, press and release the PBLED switch, 3 times.
3. Within 10 seconds turn the ignition switch off, on, off, on, off, on.  
(The siren or horn will beep and the lights will flash one time.)
4. Within 10 seconds, begin to enter your chosen 10ths digit by pressing and releasing the PBLED switch from 1 up to 9 times.
5. Within 10 seconds of the last entered 10ths digit, turn the ignition switch off then on.
6. Within 10 seconds, begin to enter your chosen units digit by pressing and releasing the PBLED switch from 1 up to 9 times.
7. Finish by turning the ignition switch to the off position.

If the new code was accepted, the unit will report back the newly entered code, by flashing the LED, first indicating the 10ths digit, pause and then the units digit. The unit will report the new code three times with a one second pause between each code, then the system will begin arming. If the LED flash pattern reports the previously stored code, the new code was not entered correctly. Please repeat steps 1 through 7 above considering the following.

**Note:** Acceptable digits 10ths or units are 1 through 9. The unit will not recognize a 0 (Zero), or no digit entered in any place, units or tenths.

**Note:** If 15 seconds of inactivity expire, or if the ignition switch is turned off for more than 5 seconds during any of the above steps, the unit will revert back to the last successfully stored code.

**Custom Code Programming Example:**

To Change the code from the factory pre-assigned code of 11 to "52" you would do the following:

1. Disarm the system by use of the transmitter, or by use of the emergency override sequence.
2. Turn the ignition switch to the on position.
3. Within 10 seconds, press and release the PBLED switch, 3 times.
4. Within 10 seconds turn the ignition switch off, on, off, on, off, on.  
(The siren or horn will beep and the lights will flash one time.)
5. Within 10 seconds, begin to press and release the PBLED switch to set the tenths digit.  
(As per the example, press and release 5 times to set the tenths digit to 5)
6. Within 10 seconds of the last press of the pushbutton, turn the ignition switch off then on.

7. Within 10 seconds, begin to press and release the PBLed switch to set the units digit. (As per the example, press and release 2 times to set the units digit to 2).

8. Turn the ignition switch to the off position. Immediately observe the LED flash pattern. You will note the LED flashing five times, pause, and then flash two times, pause. This pattern will be repeated three times indicating the new code (52) has been accepted and stored in memory.

**Note:** If after step 7, the LED flashes a code other than what was just entered, this indicates that the code has not been changed. You will have to repeat steps 1 through 7 above being certain to note the following:

Acceptable digits 10ths or units are 1 through 9. The unit will not recognize a 0 (Zero), or no digit entered in any place, units or tenths.

**Note:** If 15 seconds of inactivity expire, or if the ignition switch is turned off for more than 5 seconds during any of the above steps, the unit will revert back to the last successfully stored code.

#### **MANUALLY OVERRIDING YOUR SYSTEM:**

##### **USING THE CUSTOM CODE OVERRIDE**

Assuming the override code programmed has not been changed, and the default override code of 11 is in the system's memory.

1) Enter the vehicle and turn the ignition switch to the on position.

**Note:** The siren will sound.

2) Within 5 seconds, press and release the PBLed switch 1 time.

3) Within 5 seconds, turn the ignition switch off then on.

4) Within 5 seconds, press and release the PBLed switch 1 time.

5) Turn the ignition switch off then on and start the vehicle.

**Note:** If you have changed the programmed override code then substitute your new code tenths for step 2 above, and units for step 5 above.

##### **ELIMINATING THE NORMAL ARM/DISARM CHIRPS**

You can selectively eliminate the normal arm & disarm chirps by holding the transmitter button slightly longer when arming or disarming. This will prevent the siren chirps for one arm or disarm cycle. If you find this inconvenient and wish to eliminate these chirps permanently,

1. Turn the ignition switch "on" then "off".

3. Within 10 seconds of turning off the ignition, press and release the PBLed switch 3 times.

4. If the chirps were on before you started, the siren will emit 2 short chirps indicating that the chirps are now off. If the chirps were off before you started, the siren will emit one short chirp indicating that the chirps are now on.

**Note:** If the vehicle battery is disconnected then reconnected, the unit will return to the default setting of chirps on. Repeat the above procedure to eliminate the arm/disarm chirps.

##### **REMOTE PANIC OPERATION**

The ARM or DISARM button on your keychain transmitter also functions as a panic switch for use in emergency situations. To use remote panic,

1. Press and hold the ARM or DISARM button on the keychain transmitter for 3 or more seconds. The alarm will immediately sound.

2. To stop the alarm, press and hold the ARM or DISARM button on the transmitter again for 3 seconds. If the button is not pressed, the alarm will automatically stop after 30 seconds. Also if any transmitter button other than the ARM or DISARM button is pressed and released, the Panic mode will be turned off immediately. The normal function of this transmitter button will be suspended during the Panic sounding period.

3. During the panic mode, the Lock and Unlock buttons can be used to lock and unlock the doors, (if the option is installed), however once the unlock/disarm button is pressed, the vehicle's starter inhibit device, (where installed) will be disabled allowing the vehicle to start.

**Note:** While in the Panic mode, pressing and releasing the ARM or DISARM buttons will, if the option is installed, lock and unlock the doors respectively. While in the panic mode, anytime the DISARM button is pressed, the panic feature will continue for the allotted 30 seconds, however, the security system will be disarmed allowing the vehicle to start.

**ADDITIONAL REMOTE FUNCTION (CHANNEL 3)**

This security system has an additional features that can be connected to a number of different optional accessories. Some of the more common uses for this channel are;

- Remote Trunk Release
- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

Operation of the optional accessory or accessories, can be controlled by pressing and holding the programmed button on the keychain transmitter for four seconds, or by pressing and releasing the programmed button on the transmitter two times in succession. Check with your installation center for more information on what accessories were installed and how they are accessed.

**ADDITIONAL REMOTE FUNCTION (CHANNEL 4)**

This security system has an additional feature that can be connected to a number of different optional accessories. Some of the more common uses for this channel are:

- Remote Trunk Release
- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

To activate the optional accessory, press the programmed button on the keychain transmitter for up to 8 seconds for continuous output, or press and release for momentary activation. The optional accessory will immediately engage. Check with your installation center for more information on the optional accessory that may have been installed and how it is accessed.

**ADDITIONAL REMOTE FUNCTION (CHANNEL 5)**

This security system has an additional feature that can be connected to a number of different optional accessories. Some of the more common uses for this channel are;

- Remote Trunk Release
- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

To activate the optional accessory, press the programmed button on the keychain transmitter for up to 8 seconds for continuous output, or press and release for momentary activation. The optional accessory will immediately engage. Check with your installation center for more information on the optional accessory that may have been installed and how it is accessed.

**IGNITION CONTROLLED LOCK UNLOCK:** (Unlock Drivers Only, or Unlock All Doors)

Your security system has a selectable safety feature that allows the vehicle doors to lock when the ignition switch is turned on, (Providing all doors are closed), and to unlock the doors when the ignition switch is turned off. In addition, the unlocking of the doors is further selectable, in a two step unlock configuration, to unlock only the drivers door or all doors.

**TELEMATIC UPGRADE:**

This system has the ability to have a telematic upgrade module connected to it. This is a upgrade that can give you control of certain functions of your vehicle from a Telephone, or in some cases a computer interface. Please check with your installation center for most recent Telematic Upgrades. If you had a Telematic Upgrade installed, the manual supplied with the upgrade unit will provide a operators manual advising of the features of the system and means available to control these features of your vehicle.

Included with your system is a two way remote transceiver that makes use of a LCD screen to indicate certain that the vehicle reacted to commands that you executed from the hand held transmitter(s). Shown below are these screens for reference.



When Disarmed, Press the Arm/Lock button to Lock and Arm the System. The Lock Icon is displayed on the LCD panel & the parking lights flash once.



When Armed, Press the Disarm/Unlock button to Unlock and Disarm the System. The Unlock Icon is displayed on the LCD panel & the parking lights flash twice.



When the Key Icon Button Has Been Operated for 3 seconds the trunk open icon will flash on the LED Screen.



When the Key Icon Button is pressed 2 times in succession The three puffs of smoke show on the LCD screen for 2 seconds indicating that the vehicle received and acted upon the RF command.



When Panic Mode has been activated and the system is armed the vehicle's lights, the lock and the siren icon will flash on the LCD screen. If the system is disarmed and the Panic Mode is activated, the lights, siren, and the unlock icons will flash on the LCD screen.



When ever the vehicle is operated from the two way transmitter, the unit will beep responsive to the function executed at the vehicle. 1 beep when armed, 2 beeps when disarmed, etc... at times It may be inconvenient or too noisy to hear the beep tones, so the system allows you to set the unit for vibrate mode. To toggle on or off beep tones/vibrate, press the F & Unlock buttons, the unit will beep or vibrate, and the icons shown left will appear on the screen.



If the alarm system has been triggered, the icon displayed on the transmitter LCD will indicate which zone has been activated, as well sound the beep tones, or vibrate dependent upon the setting as shown above. The following trigger patterns will be displayed.

Triggered and the entry attempt was made to one of the vehicle doors.



Triggered and entry attempt was made to the vehicles hood or trunk.



Triggered and entry attempt was made to the vehicles glass, or the vehicle has been hit or bumped hard enough to cause a response from the vibration detector.

**ADDITIONAL ICONS THAT MAY BE DISPLAYED ARE:**



If the arm/disarm chirp tones have been turned off at the vehicle, when you arm, or disarm, the display will indicate this as shown and there will be no arm/disarm chirps at the transmitter. This is true if the transmitter is set for vibrate mode.



When the vehicle is armed, and a door is opened, or ajar, the transmitter will chirp 3 times, the lights will flash, and then the display will flash as shown. When the door is closed or the zone clears, the transmitter will chirp 1 time, and the display will clear.



When the vehicle is armed, and the hood or trunk, is opened or ajar, the transmitter will chirp 3 times, the lights will flash, and then the display will flash as shown. When the hood or trunk is closed, or the zone clears, the transmitter will chirp 1 time, and the display will clear.



When the vehicle is armed, and the vibration sensor input is active, the transmitter will chirp 3 times, the lights will flash, and then the display will flash as shown. When the input or the zone clears, the transmitter will chirp 1 time, and the display will clear.



The Battery Icon Indicator will show 3 bars as shown left, when the battery is at full capacity and will show less than 3 bars as the battery deteriorates. This is a guide and should be used to monitor the condition of the battery. The battery should require replacement approximately every 6 months.



If someone at the vehicle pages you by using the Valet/Push-Button Switch from within the vehicle, the Call Icon shown left will turn on and the hand held transmitter will beep or vibrate based on the units programming.

**Check Vehicle Status:**

Press the lock+key+option buttons simultaneously for 1 second. The vehicle's alarm will display the systems current status.

**Vibrate Or Tones:**

Press the "F"+Unlock buttons simultaneously for 1 second. The transmitter will vibrate if vibrate is on or beep if tones are turned on. Pressing this button combination again will toggle this feature on or off.

**Page Call Out:**

From within the vehicle, if the valet push button is pressed for three seconds, the alarm unit in the vehicle will transmit to the LCD remote and a beep tone will be heard on the hand held transmitter indicating that someone is calling you to the vehicle.

**Timing Count Down:**

The unit offers an additional count down timer for situations where an alert tone may be needed to remind you of something important. For instance you may have a meeting 4 hours from now and you want a reminder in 3 Hrs and 45 Mins. This additional count down timer allows you to set the count down up 19 Hours and 59 Minutes from the current time and when the timer reaches zero, the transmitter will emit a tone or vibrate dependent on your preferred setting. See chart for setting the count down time for this feature.

**Valet:**

When the System is in the valet mode, the icon shown will show in the display when the status check buttons are activated.

**Parking Meter Counter:**


The transmitter has a built in clock that can count down from 10, 20, 30, 60, 90, or 120 minutes. This feature is useful when parking the vehicle in a metered parking lot. If the time on the parking meter is 30 minutes, you can set the count down timer to 20 minutes. The transmitter will emit a beep tone when the timer expires to remind you to get back to your vehicle. See following chart for setting the parking meter count down timer feature.

**Alarm Clock Mode:**

The transmitter has a built in alarm clock that can be set to beep at a certain time each day. The alarm clock mode must be set, and the feature turned on. To use this feature please refer to the chart on the following page.

**Note:** While in the two way transmitter set up mode, 15 seconds of inactivity, or pressing the "F" button for 5 seconds, will cause the set up mode to be exited.

**Note:** Remote Start Melody select, and Temperature Check is available only with some self container remote start models.

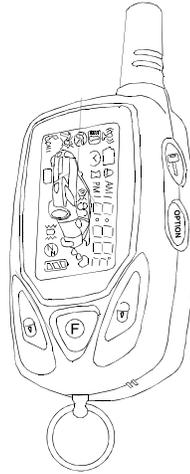

TRANSMITTER FUNCTION SELECTION	BUTTON	ICON	TONE/VIBRATE
TIMING ADJUST MODE (HRS)	(F) PRESS FOR 5 SECONDS	AM 18:88 PM	2 BEEP TONES
TIMING ADJUST MODE (MINS)	(F) 1 X	AM 18:88 PM	
ALARM CLOCK ADJUST MODE (HRS)	(F) 2 X	AM 18:88 PM	
ALARM CLOCK ADJUST MODE (MINS)	(F) 3 X	AM 18:88 PM	
ALARM CLOCK & POWER UP MUSIC SELECT	(F) 4 X	8	5 SELECTIONS PRESS KEY BUTTON OR OPTION BUTTON TO SELECT
ALARM CLOCK ADJUST MODE ON/OFF	(F) 5 X	ON/OFF	
TIMING COUNT DOWN ADJUST MODE (HRS)	(F) 6 X	18:88	
TIMING COUNT DOWN ADJUST MODE (MINS)	(F) 7 X	18:88	
TIMING COUNT DOWN END MELODY SELECTION	(F) 8 X	8	5 SELECTIONS PRESS KEY BUTTON OR OPTION BUTTON TO SELECT
TIMING COUNT DOWN MODE SELECT ON/OFF	(F) 9 X	ON/OFF	
REMOTE START ON MELODY SELECT 2	(F) 10 X	5 8	5 SELECTIONS PRESS KEY BUTTON OR OPTION BUTTON TO SELECT

TRANSMITTER FUNCTION OPERATION	BUTTON	ICON	TONE/VIBRATE
10 MIN PARKING COUNT DOWN TIMER	(F) + Option 1 X	0:10	MELODY
20 MIN PARKING COUNT DOWN TIMER	(F) + Option 2 X	0:20	MELODY
30 MIN PARKING COUNT DOWN TIMER	(F) + Option 3 X	0:30	MELODY
60 MIN PARKING COUNT DOWN TIMER	(F) + Option 4 X	1:00	MELODY
90 MIN PARKING COUNT DOWN TIMER	(F) + Option 5 X	1:30	MELODY
120 MIN PARKING COUNT DOWN TIMER	(F) + Option 6 X	2:00	MELODY
PARKING COUNT DOWN TIMER OFF MODE	(F) + Option 7 X	0:00	MELODY
BACKLIGHT DISPLAY FOR 10 SECONDS	(F) 1 X		ILLUMINATES DISPLAY
VIBRATE/TONE SELECT	(F) +  1 X		VIBRATE 4 TIMES OR BEEP 1 X
ALARM CLOCK MODE SELECT ON/OFF	(F) +  1 X	AM 18:88 PM	MELODY
FAHRENHEIT/CELSIUS SELECT	(F) +  + OPTION 1 X	F or C	MELODY
POWER SAVE MODE	(F) +  1 X		MELODY

**APS-596N**  
**SYSTEM FUNCTIONS AT A GLANCE**

**DASH LED INDICATORS**

RAPID FLASHING	=	PASSIVE ARMING
SLOW FLASHING	=	ARMED
OFF	=	DISARMED
ON SOLID	=	VALET MODE
3 FLASH...PAUSE	=	INTRUSION ZONE 3
2 FLASH...PAUSE	=	INTRUSION ZONE 2
1 FLASH...PAUSE	=	INTRUSION ZONE 1

**SIREN CHIRP INDICATORS**

*1 CHIRP	=	ARM
*2 CHIRPS	=	DISARM
3 CHIRPS	=	ARM/DOOR OPENED
4 CHIRPS	=	DISARM/INTRUSION


\* These chirps are optional, and can be de - activated.

**PARKING LAMP INDICATORS**

1 FLASH	=	ARM
2 FLASHES	=	DISARM
3 FLASHES	=	DISARM/INTRUSION

**Your System Has These Features Activated**

- Starter Disable
- Remote Keyless Entry
- Auto Lock with ignition key
- Auto Unlock with ignition key
- Passive Arming
- No Lock in passive mode
- Hardwire doors, hood, and trunk
- Custom Code Override
- Valet Switch Override

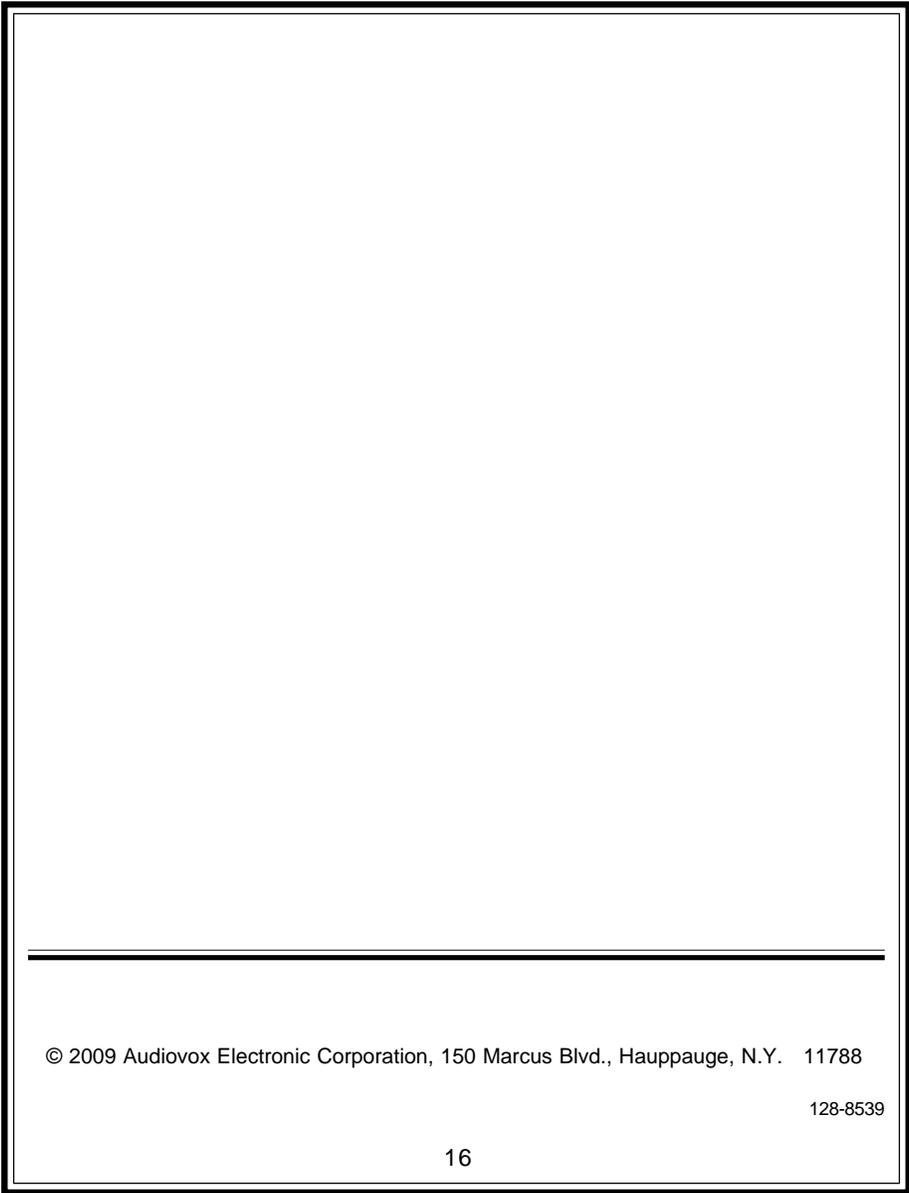

---

© 2009 Audiovox Electronic Corporation, 150 Marcus Blvd., Hauppauge, N.Y. 11788

128-8539